

## 3538 BALE BUSTER

TROUBLE	CAUSE	CHECK	CORRECTION
MACHINE WON'T RUN	POWER FAILURE	CHECK OUTLET POWER	USE DIFFERENT OUTLET
		CHECK ALL WIRE CONNECTIONS	TIGHTEN CONTACTS BACK
		CHECK SWITCH IN ON POSITION	SWITCH ON-REFER TO FIGURE #4 SECTION 5
		CHECK VOLTAGE ON BOTH SIDE OF SWITCH	REPLACE SWITCH
		CHECK RESET ON MOTOR	PUSH RESET-REFER TO FIGURE#1 SECTION6
	COMPONENT FAILURE	CHECK VOLTAGE TO MOTOR	NO VOLTAGE-REFER TO ABOVE
		MANUALLY TURN FAN ON MOTOR	NORMAL VOLTAGE-REPLACE MOTOR
		IF TURNS BELT-REFER TO ABOVE	IF WILL NOT TURN -REPLACE GEAR REDUCER
WATER DOESN'T WORK	COIL FAILURE	START DRAG AND CHECK COIL FOR MAGNETIC	NON-MAGNETIC-REPLACE COIL
		MAGNETIC-REFER TO VALVE	
	VALVE FAILURE	START DRAG AND CHECK COIL FOR MAGNETIC	MAGNETIC-REPLACE VALVE
	SPRAY TIP FAILURE	CHECK SPRAY TIPS	REPLACE SPRAY TIPS
		CLEAN OUT SPRAY TIPS	
SOIL NOT FLUFFED	FLUFFER POST WORN	CHECK FLUFFER POST ON AUGER	REPLACE FLUFFER POST

\*\*\*\*\*WILL NEED VOLTAGE METER AND/OR SCREWDRIVER FOR MOST TROUBLESHOOTING\*\*\*\*\*

For Parts Quotes and/or Orders Call Kase (254)694-5846