

3561 Gobbler BALE BUSTER

TROUBLE	CAUSE	СНЕСК	CORRECTION
	POWER FAILURE	CHECK OUTLET POWER	USE DIFFERENT OUTLET
		CHECK ALL WIRE CONNECTIONS	TIGHTEN CONTACTS BACK
		CHECK E-STOP ENGAGED	DISENGAGE E-STOP
		CHECK SWITCH IN ON POSITION	TURN SWITCH ON
		CHECK VOLTAGE ON BOTH SIDE ON	REFER TO ABOVE
		DISCONNECT	
		CHECK VOLTAGE ON BOTH SIDE OF	REPLACE DISCONNECT
		DISCONNECT	
		CHECK VOLTAGE ON BOTH SIDES OF	REPLACE DISTRUBUTION BLOCK
		DISTRUBUTION BLOCK	
		CHECK VOLTAGE ON BOTH SIDE OF	REPLACE BREAKER
		BREAKER	
		CHECK VOLTAGE ON BOTH SIDE OF	REPLACE FUSE
MACHINE WON'T RUN		CONTROL FUSE	REPLACE FUSE HOLDER
		CHECK VOLTAGE ON BOTH SIDES OF	REPLACE OVERLOAD
		OVERLOAD	
		CHECK VOLTAGE ON BOTH SIDES OF	REPLACE CONTACTOR
		CONTACTOR	
		CHECK VOLTAGE ON BOTH SIDES OF	REPLACE SWITCH REFER BACK TO OVERLOAD
		SWITCHES	
		CHECK A/C VOLTAGE ON DC CONTROL	
		BOARD L1 & L2	NO VOLTAGE-REPLACE CD CONTROLLER
		CHECK D/C/VOLTAGE ON DC CONTROL BOARD A1 &A2	
		BOARD AI QAZ	CORRECT VOLTAGE-REPLACE MOTOR
		CHECK RESET ON MOTOR	PUSH RESET
		CHECK NESET ON MOTOR	NO VOLTAGE-REFER TO ABOVE
		CHECK VOLTAGE TO MOTOR	NORMAL VOLTAGE- REPLACE MOTOR
		MANUALLY TURN FAN ON MOTOR	WON'T TURN-REPLACE GEAR REDUCER
			TURNS-REFER TO MOTOR

	SENSOR MALFUNTION	CHECK ZEN UNIT IF SENSOR IS	REPLACE SENSOR
		READING	CALL KASE FOR INSTRUCTIONS ON HOW TO TROUBLE SHOOT SENSOR
	COIL FAILURE	START DRAG AND CHECK COIL FOR MAGNETIC	NON-MAGNETIC-REPLACE COIL
			MAGNETIC-REFER TO VALVE
WATER DOESN'T WORK	VALVE FAILURE	START DRAG AND CHECK COIL FOR MAGNETIC	MAGNETIC-REPLACE VALVE
	SPRAY TIP FAILURE	CHECK SPRAY TIPS	REPLACE SPRAY TIPS
			CLEAN OUT SPRAY TIPS
	MOTOR FAILURE	CHECK VOLTAGE OF MOTOR	NO VOLTAGE-REFER TO POWER FAILURE
HYDRAULIC GATE WON'T LIFT			CORRECT VOLTAGE-REPLACE MOTOR
	LOW FLUID LEVEL	CHECK FLUID IN TANK	ADD FLUID
	PSI SCREW NEEDS	CHECK PSI ADJUSTMENT SCREW	ADJUST TO 1-1/2 TURN OUT
	ADJUSTMENT		REPLACE HYDRAULIC PUMP
SOIL NOT FLUFFED	FLUFFER PADDLES WORN	CHECK FLUFFER PADDLES ON	REPLACE FLUFFER PADDLES
		AUGER	REMOVE AND REMOUNT PADDLES BACKWARD ON AUGER

WILL NEED AC/DC VOLTAGE METER AND/OR SCREWDRIVER FOR MOST TROUBLESHOOTING

For Parts Quotes and/or Orders Call Kase (254)694-5846