



1561 TopHopper AMMENDMENT DISPENSER

TROUBLE	CAUSE	CHECK	CORRECTION
MACHINE WON'T RUN	POWER FAILURE	CHECK OUTLET POWER	USE DIFFERENT OUTLET
		CHECK ALL WIRE CONNECTIONS	TIGHTEN CONTACTS BACK
		MAKE SURE SWITCH IS "ON" POSITION	SWITCH ON
		CHECK VARIABLE SPEED CONTROL	TURN SPEED UP
		CHECK VOLTAGE ON BOTH SIDE OF SWITCH	REPLACE SWITCH
		CHECK INPUT A/C VOLTAGE ON DC CONTROLE BOARD "L1&L2"	REFER TO ABOVE IF NO POWER
		CHECK OUTPUT D/C VOLTAGE ON DC CONTROLE BOARD"A1&A2"	IF NO DC VOLTAGE -NEW DC CONTROL BOARD
PULLEY DOESN'T TURN	WORN PULLEY	CHECK KNURLING ON DRIVE PULLEY	REPLACE PULLEY
	PULLEY SEIZED	VISUALLY INSPECT PULLEY	REPLACE BEARINGS
			REPLACE PULLEY

*******WILL NEED VOLTAGE METER AND/OR SCREWDRIVER FOR MOST TROUBLESHOOTING*******

For Parts Quotes and/or Orders Call Kase (254)694-5846